


VLADIBALL INSTRUCTIONS


Skydive with Vladiball only when the temperature at the DZ (ground) is between 15°C and 40°C

Ball preparation


check for free rotation of the ball's halves

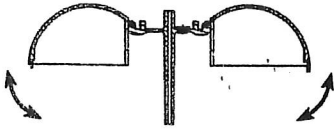

close the ball and secure it with rubber band

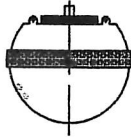


inject the extra weight

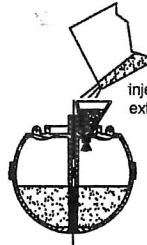


400gr for belly flying
560gr for freeflying

put the secure cap on

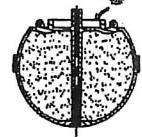

a ball assembly is ready

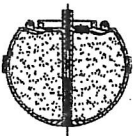

Cylinder resetting

Be sure that your Vladiball was not exposed to any source of direct heat at least 1 hour before every cylinder reset.


Within this hour, keep your Vladiball on the outside temperature and in the shade.

keep the cylinder vent opened for at least 5 sec



(do this within 45 minutes before every jump)


fasten the vent screw tight, air mustn't come out

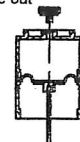


fasten the cylinder cap




cylinder assembly is ready

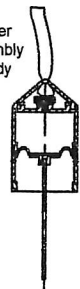

slide the needle through the straw and screw the cylinder to the ball assembly

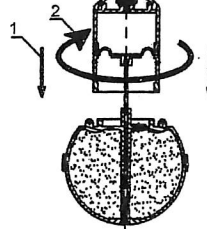


Vladiball assembly is ready

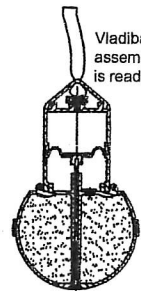

In the airplane and freefall


On the climb up to the exit altitude, please check the ball's bottom. Needle should appear before 5000ft and be fully extended at 7000ft.

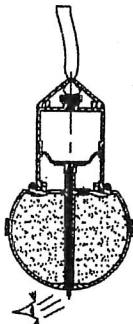

at the exit altitude take the secure rubber band off


maximum exit altitude is 17,000 ft

off

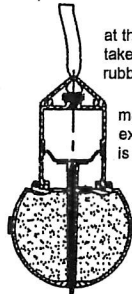


in freefall, make a periodic checks of needle movement

needle should start to move at 6500 ft and become invisible at 4000 ft

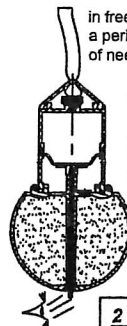





If properly assembled, your Vladiball should open at 1800ft (+500ft)

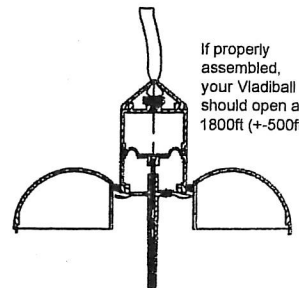

2 nevers to remember

- 1) Never fly above the ball.
- 2) Never chase it below 4000ft.

VLADIBALL TROUBLESHOOTING
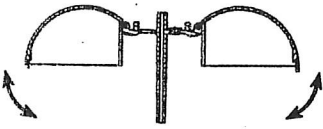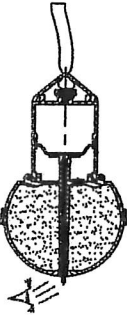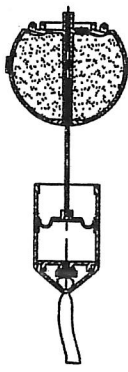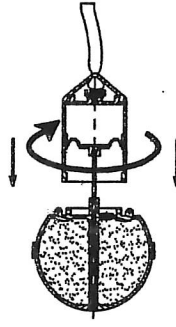
<p>1. Ball preparation</p> <p>check for free rotation of the ball's halves</p> 	<p>If the ball does not unlock and rotate freely, abort your vladiball missions and contact your dealer or directly producer for further instructions.</p>	<p>intentionally left blank</p>	<p>intentionally left blank</p>
<p>2. In the airplane</p> <p>On the climb up to the exit altitude, please check the ball's bottom. Needle should appear before 5000ft and be fully extended at 7000ft.</p> 	<p>If a needle does not appear even after 6000ft, take the cylinder off. Turn it upside down and try to align all 3 holes with needle.</p> 	<p>Put the cylinder back on. If now needle passes through, proceed like nothing have happened.</p> 	<p>If this action does not help from the first time, please repeat it few more times. If even then it does not help, abort your vladiball flight and contact your dealer or directly producer for further instructions.</p>